

FILLING PRINCIPLE

AFTER THE PISTON GETS ALL THE WAY FORWARD, THE NOZZLE CLOSES, THE VALVE TURNS AND THE PROCESS STARTS OVER.

THE PRODUCT PISTON MOVING FORWARD PUSHES THE PRODUCT OUT OF THE NOZZLE.

